


# ⚠ WARNING

**Dishwasher Component Circuit Diagrams/ Composant Circuit Diagrammes de Lave-vaisselle**  
Electric Shock Hazard. Product Installation, and use of this page, should only be undertaken by a professional service technician who has been trained on and is fully familiar with this product. Disconnect power before touching any part or taking any resistance measurements.


## ⚠ AVERTISSEMENT

Risque de choc électrique. La réparation doit être effectuée par un technicien qualifié seulement qui a été formé et est très familier avec ce produit. Débrancher l'alimentation électrique avant de toucher toute partie du module ou de procéder à toute mesure de résistance.

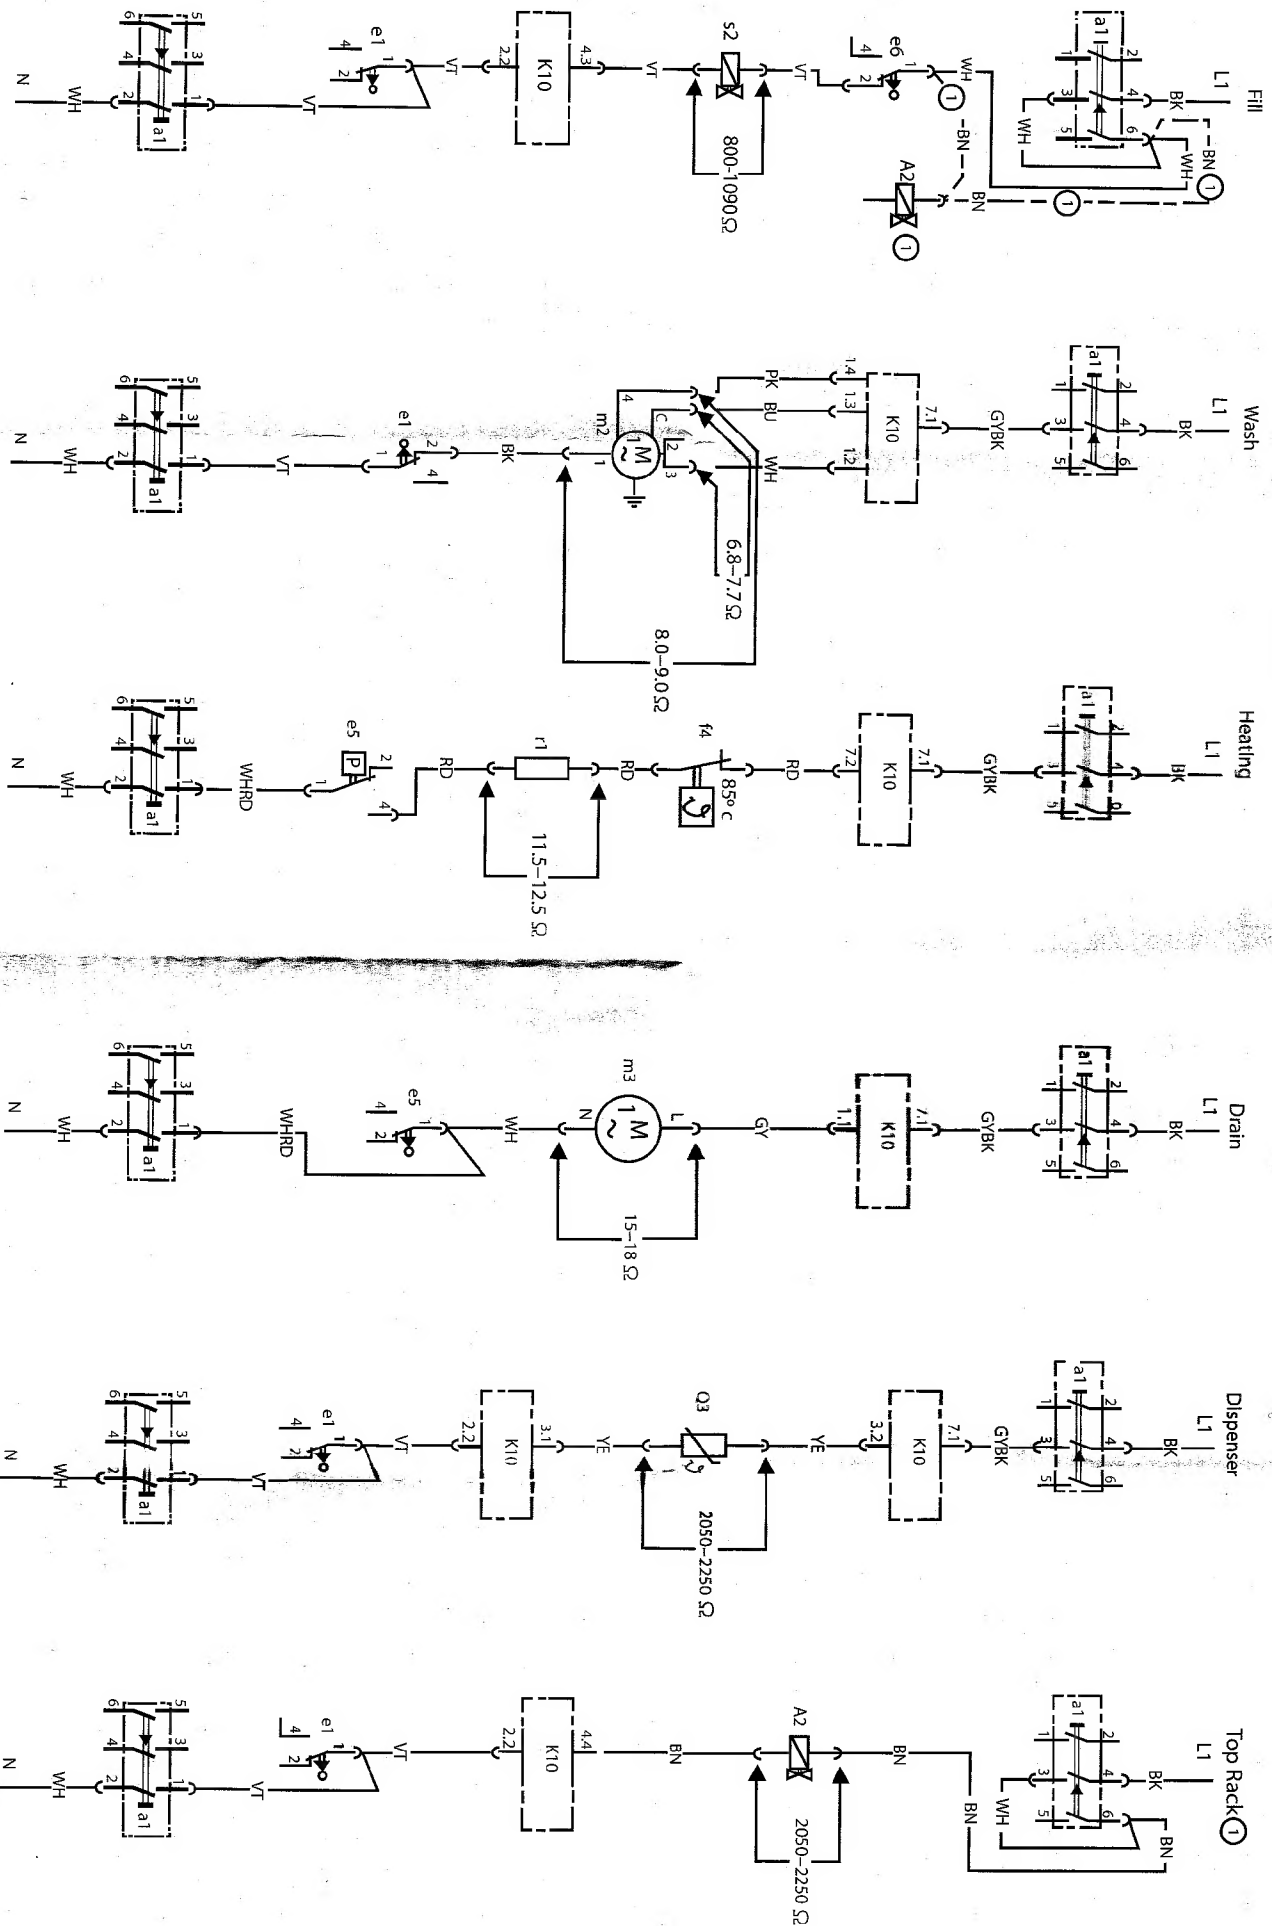

## Storage and Customer Programs

Control provided with the dishwasher, stores error codes from the last wash cycle in Units with a display the last eight wash cycles)

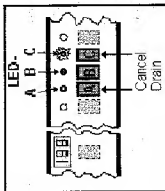

### I Function Menu -

Pressing any two wash cycle buttons turn the dishwasher on with the main switch. The coding of the control shown in the display or with the LED's until you release the buttons. After releasing the buttons you will be placed in function menu. You will then need to select the program you wish to use. See below for further instructions to access the program you wish to use.

### Storage -

To access the failure storage program press the "C" button when the following appears on the control



If the above is not displayed press the "B" button until it is displayed then press the C button. The error code for the last wash cycle will be displayed (For the model employing the display, the "C" button can continue to be pressed to review the errors found in the last 11 wash cycles.)

To escape out of this program press the main switch off and on.

The failure storage can be cleared by running the customer service program

### Service Program -

To access the customer service program you must enter into the special function menu as shown above.

Then press the "B" button until the LED "C" is glowing or the display shows "P1"



Press "C" button to start the Customer Service Program

By pressing the "B" button during the Customer service program will allow you to go to the next step in the program

If any of the LED's are blinking 2 times a sec, or an E with a number appears, see the error code description below

To cancel the customer service program press the main switch off and on

m Description	Temperature	Time (sec)	Fill Amount	Approximate Current (A)
Sump Inlet Valve		15		0.25
Sump Inlet Valve		5	1.1M	0.1
Sump Inlet Valve		5	3.0L/2 HL	1.15
Sump Heater, Dispenser		120		11.0
Sump Heater Unit Temperatures Reached	60			11.0
Sump Dispenser		120		11.0
Sump Heater, Aquasense Calibration		30		0.25
Sump (5 sec. On 5 sec. Off)		45		0.25
Sump		15		1.15
Sump, Drain PUMP				

### Codes (Shown with LED's and/or display)

ED's

B C

Display

Priority

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

26


# ⚠ WARNING

Electric Shock Hazard. Product installation, and use of this page, should only be undertaken by a professional service technician who has been trained on and is fully familiar with, this product. (1) Disconnect power before touching any part or taking any resistance measurements.

# ⚠ AVERTISSEMENT

Risque de choc électrique. La réparation doit être effectuée par un technicien qualifié seulement qui a été formé et est très familier avec ce produit. Débranchez l'alimentation électrique avant de toucher toute partie du module ou de procéder à toute mesure de résistance.

## Control and Display Module/ Module affichage/contrôle

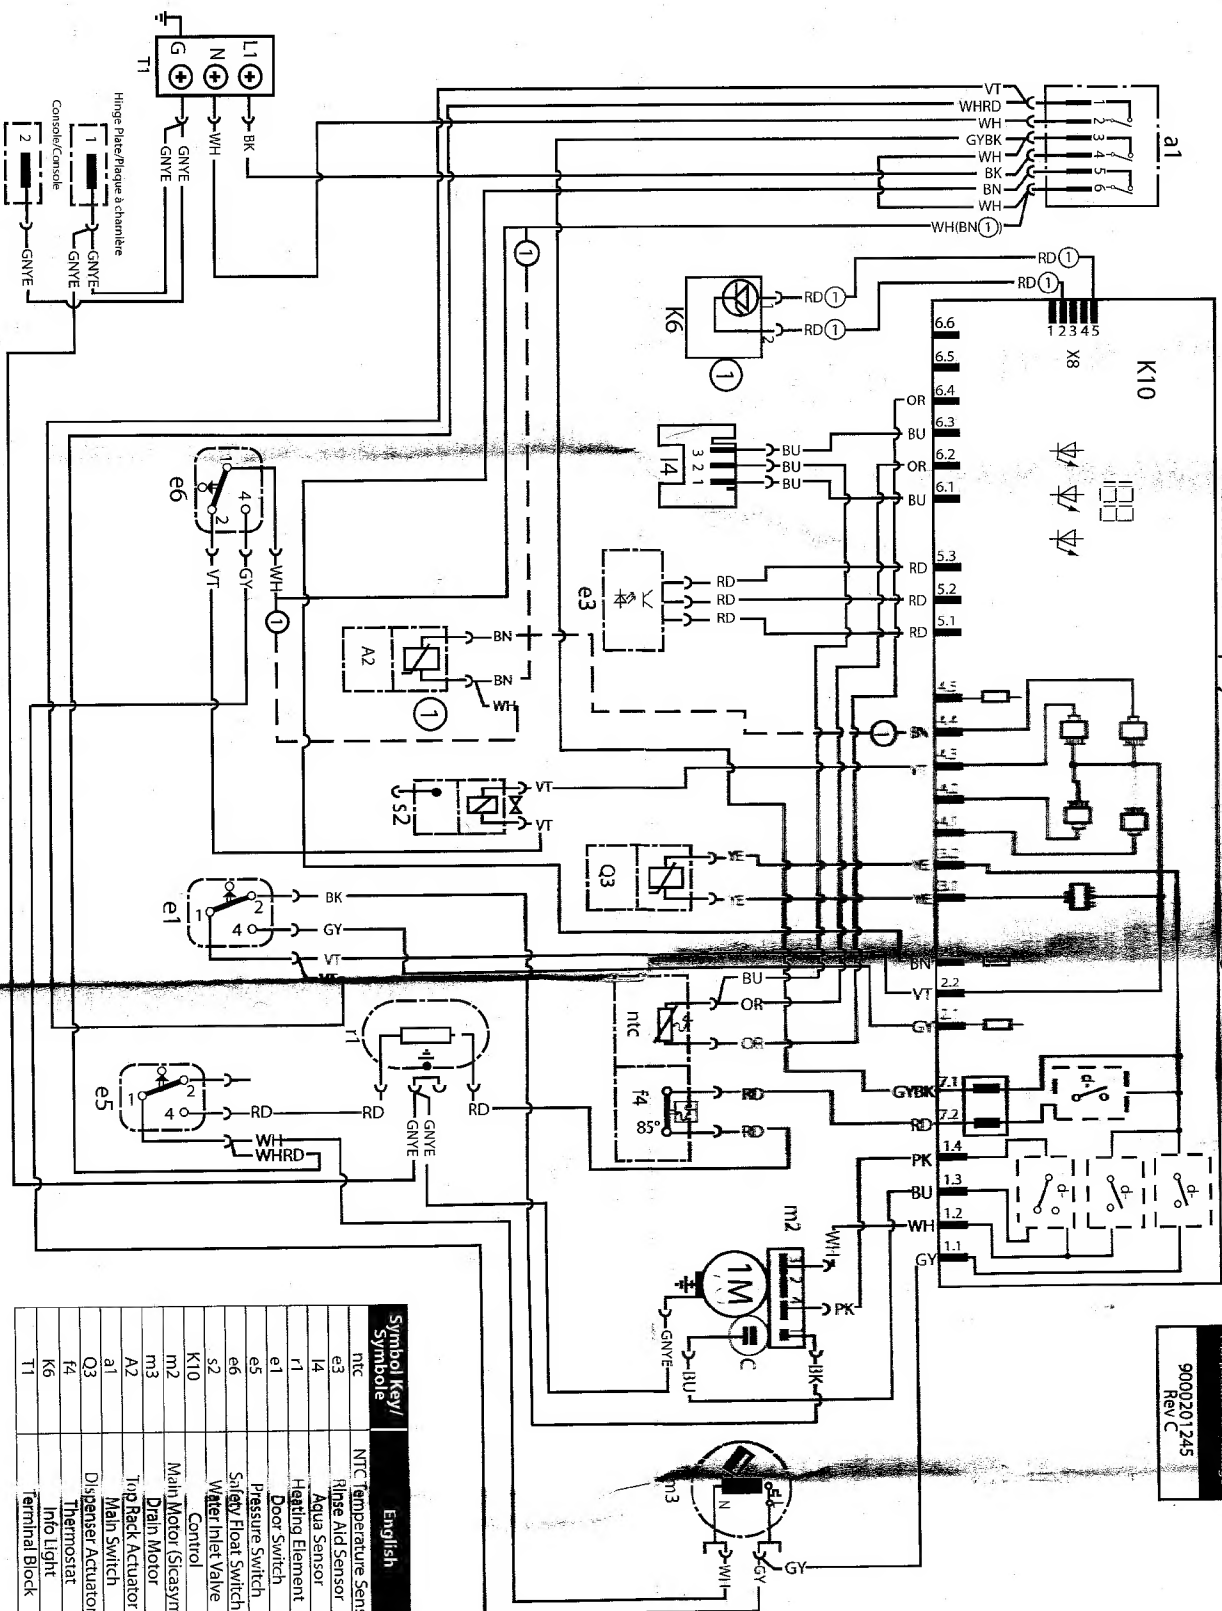

Whiting/Danham  
Illustration de câblage  
9000201245  
Rev C

Whiting/Danham  
Illustration de câblage  
9000201245  
Rev C

Symbol Key/ Symbole	English	Français
BK	Black	Noir
BN	Brown	Brun
RD	Red	Rouge
YE	Yellow	Jaune
GN	Green	Vert
BU	Blue	Bleu
VT	Violet	Violet
GY	Grey	Gris
WH	White	Blanc
PK	Pink	Rose
OR	Orange	Orange

Symbol Key/ Symbole	English	Français
NTC	NTC Temperature Sensor	Capteur de température NTC
e3	Ring Aid Sensor	Capteur agent de rinçage
14	Aqua Sensor	Capteur de aqua
r1	Heating Element	Élément chauffant
e1	Door Switch	Interrupteur de porte
e5	Pressure Switch	Interrupteur de pression
e6	Safety Float Switch	Interrupteur à flotteur de sécurité
s2	Water Inlet Valve	Soupape entrée d'eau
K10	Control	Contrôle
m2	Main Motor (Sicasym)	Moteur principal (Sicasym)
m3	Drain Motor	Moteur de drainage
A2	Top Rack Actuator	Actionneur panier supérieur
a1	Main Switch	Interrupteur principal
Q3	Dispenser Actuator	Actionneur de distributeur
f4	Thermostat	Thermostat
K6	Info Light	Voyant info
T1	Terminal Block	Bloc de bornes

1 If feature is available / Si caractéristique disponible

Booth DistriMSHER